













# INSTRUKCJA MONTAZU 3288 London

<b>A</b>		<b>8</b>
<b>B</b>		<b>1</b>
<b>C</b>		<b>1</b>
<b>D</b>		<b>5</b>
<b>E</b>		<b>1</b>
<b>F</b>	 M6X20	<b>4</b>

<b>G</b>		<b>1</b>
<b>H</b>		<b>1</b>
<b>I</b>		<b>1</b>
<b>J</b>	 M6X30	<b>8</b>
<b>K</b>		<b>1 Pair</b>
<b>L</b>	 M6X16	<b>4</b>

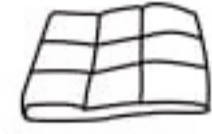